

### **Overview**

 
The KEMET ED2/EF2 miniature signal relays offer a compact case size in a slim package. Minimal board space is consumed with either a through-hole or surface mount configuration. These relays are recognized by UL and CSA, while also being compliant with Part 68 of the FCC's 1,500 V surge capacity.

# **Applications**

- · Electronic switching systems
- PBX
- · Terminal equipment
- · Telephone systems

# **Benefits**

- Low power consumption (< 70 mW)
- · Compact and lightweight
- · Low magnetic interference
- Tube or embossed tape and reel packaging
- UL recognized (E73266) and CSA certified (LR46266)
- · Surface mount and through-hole options



Ростов-на-Дону (863)308-18-15

Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78

Севастополь (8692)22-31-93

Симферополь (3652)67-13-56 Смоленск (4812)29-41-54

Ставрополь (8652)20-65-13 Сургут (3462)77-98-35 Сыктывкар (8212)25-95-17

Рязань (4912)46-61-64

Самара (846)206-03-16 Саранск (8342)22-96-24

Сочи (862)225-72-31

Тамбов (4752)50-40-97 Тверь (4822)63-31-35

# **Part Number System**

EF2-	3		NU	-L
Series	Coil Voltage	Latch Type	Lead Type	Packaging
ED2- = Through-hole mount EF2- = Surface mount	1.5 = 1.5 VDC 3 = 3 VDC 4.5 = 4.5 VDC 5 = 5 VDC 9 = 9 VDC 12 = 12 VDC 24 = 24 VDC	Blank = Non-latch type	NU = Standard NJ = Trimmed NUH = Minimum footprint NUX = High solder joint reliability	Blank = Tube -L = Embossed tape on reel

Алматы (7273)495-231 Ангарск (3955)60-70-56 Архангельск (8182)63-90-72 Астрахань (8512)99-46-04 Бариаул (3852)73-04-60 Белгород (4722)40-23-64 Благовещенск (4162)22-76-07 Брянск (4832)59-03-52 Владивосток (423)249-28-31 Владикавказ (8672)28-90-48 Владимир (4922)49-43-18 Волгоград (8412)26-41-59 Воронеж (473)204-51-73 Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Иркутск (395)279-98-46 Казань (843)206-01-48 Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (832)68-02-04 Коломна (4966)23-41-49 Кострома (4966)23-41-49 Кострома (4966)23-41-49 Кострома (4966)23-41-49 Кострома (4966)23-41-49 Кострома (4966)23-41-49 Курск (4712)77-17-48 Курск (4712)77-13-04 Курск (4742)52-20-81 Казахстан +7(7172)727-132 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Ноябрьск (3496)41-32-12 Новосибирск (383)227-86-73 Омск (3812)21-46-40 Орел (4862)44-53-42 Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Петрозаводск (8142)55-98-37 Псков (8112)59-10-37 Пермь (342)205-81-47


Киргизия +996(312)96-26-47

Тольятти (8482)63-91-07 Томск (3822)98-41-53 Тула (4872)33-79-87 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59 Улан-Удэ (3012)59-97-51 Уфа (347)229-48-12 Хабаровск (4212)92-98-04 Чебоксары (8352)28-53-07 Челябиск (351)202-03-61 Череповец (8202)49-02-64 Чита (3022)38-34-83 Якутск (4112)23-90-97 Ярославль (4852)69-52-93




# **Dimensions – Millimeters**

### **ED2 Series**

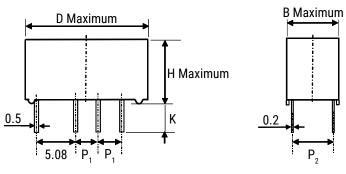

**EF2 Series** 

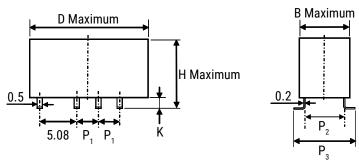


Series	D	Н	В	<b>P</b> <sub>1</sub>	<b>P</b> <sub>2</sub>	P <sub>3</sub>	K
ED2 (NU)	15.0	9.4	7.5	2.54	5.08	-	3.2
ED2 (NJ)	15.0	9.4	7.5	2.54	5.08	_	2.8
EF2 (NU)	15.0	10.0	7.5	2.54	5.08	9.5	1.0
EF2 (NUH)	15.0	10.0	7.5	2.54	5.08	7.5	1.0
EF2 (NUX)	15.0	10.35	7.5	2.54	5.08	9.0	1.35

General tolerance: ±0.2



# **Pin Configurations**

### **Bottom view**

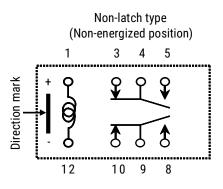

# Safety Standards and Ratings

<b>Certification Body</b>	Mark	Specification	File Number	Rating
UL		UL Recognized (UL508)1	E73266	30 VDC, 1 A (resistive)
CSA	SP:	CSA Certified (CSA 22.2 #14)	LR46266	110 VDC, 0.3 A (resistive) 125 VAC, 0.5 A (resistive)

<sup>1</sup> Spacing: UL114, UL478

Certification Body	Mark	Lead Type	Specification	File Number	Class	Rating
TUV	$\triangle$	Non-latch	TUV Certified (EN61810)	R 9950557	Basic insulation	Creepage and clearance of coil to contact is more than 2 mm (According to EN60950)



# Table 1 – Ratings & Part Number Reference


Part Number	Nominal Coil Voltage (VDC)	Lead Type	Packaging
ED2-1.5NU	1.5	Radial	Tube
ED2-3NU	3	Radial	Tube
ED2-4.5NU	4.5	Radial	Tube
ED2-5NU	5	Radial	Tube
ED2-9NU	9	Radial	Tube
ED2-12NU	12	Radial	Tube
ED2-24NU	24	Radial	Tube
ED2-1.5NJ	1.5	Trimmed Radial	Tube
ED2-3NJ	3	Trimmed Radial	Tube
ED2-4.5NJ	4.5	Trimmed Radial	Tube
ED2-5NJ	5	Trimmed Radial	Tube
ED2-9NJ	9	Trimmed Radial	Tube
ED2-12NJ	12	Trimmed Radial	Tube
ED2-24NJ	24	Trimmed Radial	Tube
EF2-1.5NU	1.5	Surface mount	Tube
EF2-3NU	3	Surface mount	Tube
EF2-4.5NU	4.5	Surface mount	Tube
EF2-5NU	5	Surface mount	Tube
EF2-9NU	9	Surface mount	Tube
EF2-12NU	12	Surface mount	Tube
EF2-24NU	24	Surface mount	Tube
EF2-1.5NU-L	1.5	Surface mount	Tape on Reel
EF2-3NU-L	3	Surface mount	Tape on Reel
EF2-4.5NU-L	4.5	Surface mount	Tape on Reel
EF2-5NU-L	5	Surface mount	Tape on Reel
EF2-9NU-L	9	Surface mount	Tape on Reel
EF2-12NU-L	12	Surface mount	Tape on Reel
EF2-24NU-L	24	Surface mount	Tape on Reel
EF2-1.5NUH	1.5	Surface mount, Minimum footprint	Tube
EF2-3NUH	3	Surface mount, Minimum footprint	Tube
EF2-4.5NUH	4.5	Surface mount, Minimum footprint	Tube
EF2-5NUH	5	Surface mount, Minimum footprint	Tube
EF2-9NUH	9	Surface mount, Minimum footprint	Tube
EF2-12NUH	12	Surface mount, Minimum footprint	Tube
EF2-24NUH	24	Surface mount, Minimum footprint	Tube
EF2-1.5NUH-L	1.5	Surface mount, Minimum footprint	Tape on Reel
EF2-3NUH-L	3	Surface mount, Minimum footprint	Tape on Reel
EF2-4.5NUH-L	4.5	Surface mount, Minimum footprint	Tape on Reel
EF2-5NUH-L	5	Surface mount, Minimum footprint	Tape on Reel
EF2-9NUH-L	9	Surface mount, Minimum footprint	Tape on Reel
EF2-12NUH-L	12	Surface mount, Minimum footprint	Tape on Reel
EF2-24NUH-L	24	Surface mount, Minimum footprint	Tape on Reel
EF2-1.5NUX	1.5	Surface mount, High solder joint reliability	Tube
EF2-3NUX	4.5	Surface mount, High solder joint reliability	Tube
EF2-4.5NUX	4.5	Surface mount, High solder joint reliability	Tube Tube
EF2-5NUX EF2-9NUX	9	Surface mount, High solder joint reliability Surface mount, High solder joint reliability	Tube
EF2-9NUX EF2-12NUX	12	Surface mount, High solder joint reliability Surface mount, High solder joint reliability	Tube
EF2-12NUX EF2-24NUX	24	Surface mount, High solder joint reliability	Tube
EF2-24NUX EF2-1.5NUX-L	1.5	Surface mount, High solder joint reliability	Tape on Reel
EF2-3NUX-L	3	Surface mount, High solder joint reliability	Tape on Reel
EF2-3NUX-L EF2-4.5NUX-L	4.5	Surface mount, High solder joint reliability	Tape on Reel
EF2-4.5NUX-L EF2-5NUX-L	4.5	Surface mount, High solder joint reliability	Tape on Reel
EF2-5NUX-L EF2-9NUX-L	9	Surface mount, High solder joint reliability	Tape on Reel
EF2-9NUX-L EF2-12NUX-L	12	Surface mount, High solder joint reliability	Tape on Reel
EF2-12NUX-L EF2-24NUX-L	24	Surface mount, High solder joint reliability	Tape on Reel
EFZ-24NUX-L	Δ4	Surrace mount, righ solder joint renability	Tape off Reel



# Land Pattern – Millimeters


### ED2 Series (bottom view)

Non-latch type

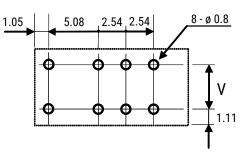

### EF2 Series (top view)

Non-latch type

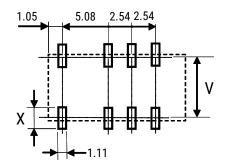

Series	V	X
ED2 (NU, NJ)	5.08	—
EF2 (NU)	7.29	3.0
EF2 (NUH)	6.29	2.0
EF2 (NUX)	7.02	2.73



## **Soldering Process**

#### ED2 - Through-hole Mounting

Automatic Soldering

Preheating: 110-120°C/110 seconds (maximum)

Solder temperature: 260°C maximum


Solder time: 5 seconds maximum

Note: KEMET recommends cooling down a printed circuit board to less than 110°C within 40 seconds after soldering.

Manual Soldering

Solder temperature: 350°C maximum Solder time: 3 seconds maximum

#### **EF2 – Surface Mounting**

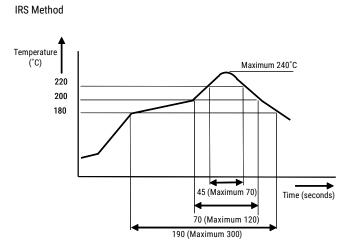

Note: Temperature profile shows printed circuit board surface temperature on the relay terminal portion. Please consult KEMET if you wish to use a temperature profile other than above.



# **Contact Specifications**

ltem		ED2/EF2	
Contact Form		2 Form C	
Contact Material		Silver alloy with gold alloy overlay	
	Maximum Switching Power	30 W, 62.5 VA	
Contact Ratings	Maximum Switching Voltage	220 VDC, 250 VAC	
Contact Ratings	Maximum Switching Current	1 A	
	Maximum Carrying Current	2 A	
Minimum Contact Ratings		10 mVDC, 10 μA*1	
Initial Contact Resistance		75 mΩ maximum (initial)	
Operating Time (excluding bounce)		Approximately 3 milliseconds	
Release Time (excluding bounce)		Approximately 2 milliseconds	
Insulation Resistance		1,000 MΩ at 500 VDC	
	Between Open Contacts	1,000 VAC (for one minute), 1,500 V surge (10 x 160 $\mu s)^{*_2}$	
Withstand Voltage	Between Adjacent Contacts	1,000 VAC (for one minute), 1,500 V surge (10 x 160 $\mu s)^{\star_2}$	
	Between Coil and Contacts	1,500 VAC (for one minute), 2,500 V surge (2 x 10 $\mu s)^{*_3}$	
Shock Resistance		735 m/s² (75 G) – misoperation 980 m/s² (100 G) – destructive failure	
Vibration Resistance		10 to 55 Hz, double amplitude 3 mm (20 G) – misoperation 10 to 55 Hz, double amplitude 5 mm (30 G) – destructive failure	
Ambient Temperature		-40 to +85°C	
Coil Temperature Rise		7°C at nominal coil voltage (50 mW)	
	Non-load	1 x 10 <sup>8</sup> operations*4	
Running Specifications	Load	50 VDC 0.1 A (resistive), 1 x 10 <sup>6</sup> operations at 85°C, 5 Hz 10 VDC 10 mA (resistive), 1 x 10 <sup>6</sup> operations at 85°C, 2 Hz	
Weight		Approximately 2.2 g	

<sup>\*1</sup> This value is a reference value in the resistance load. Minimum capacity changes depending on the switching frequency, environment temperature, and load.
 <sup>\*2</sup> Rise time: 10 μs; decay time to half crest: 160 μs.
 <sup>\*3</sup> Rise time: 2 μs; decay time to half crest: 10 μs.
 <sup>\*4</sup> This shows the number of operations with fatal defects. Stable characteristics are maintained for 1 x 10<sup>7</sup> operations.

# **Coil Specifications**

	Non-latch Type (at 20°C)				
Nominal Coil Voltage (VDC)	Coil Resistance (Ω) ±10%	Operating Voltage <sup>1</sup> (VDC)	Release Voltage <sup>1</sup> (VDC)	Nominal Operating Power (mW)	
1.5	45.0	1.13	0.15	50	
3	180.0	2.25	0.3	50	
4.5	405.0	3.38	0.45	50	
5	500.0	3.75	0.5	50	
9	1,473.0	6.75	0.9	55	
12	2,400.0	9.0	1.2	60	
24	8,229.0	18.0	2.4	70	


<sup>1</sup> Test by pulse voltage.




# **Recommended Relay Drive Conditions**

Coil Type	Rating	Ambient Temperature
Non-latch	Voltage: $\leq \pm 5\%$ of nominal voltage	-40 to +85°C

# Marking

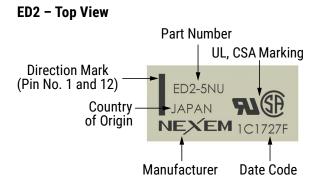

EF2 – Top View

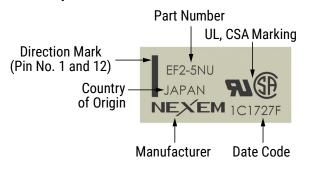




# **Performance Data**

#### **Coil Temperature Rise**


Temperature is measured by coil resistance

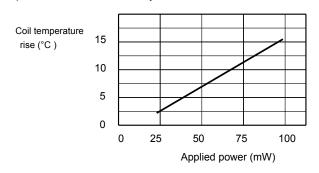


# Coil temperature rise (°C) 15 10 Applied power 0.05W 10 5 0 0 5 10 0 5 10 15 20 Applied time (minute)

### **Switching Capacity**

**Maximum Values** 

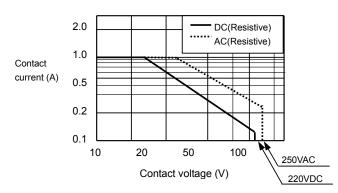



# **Maximum Coil Voltage** Maximum value of permissible alteration

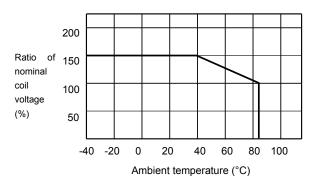

### Applied Voltage vs. Timing

(Sample: ED2-5NU)

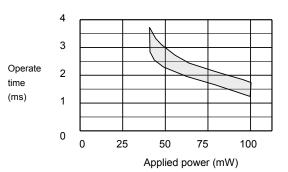

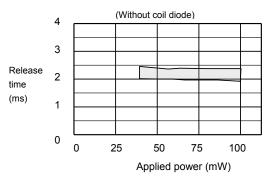




### Performance Data cont.


#### **Operate and Release Voltage vs. Ambient Temperature**

This shows a typical change of operate (release) voltage. The value of must operate is estimated, so coil voltage must be applied higher than this value for safe operation. For hot start operation, please inquire with KEMET.

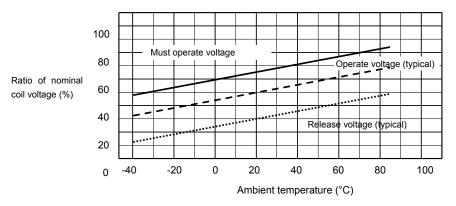


### **Running Test (Non-load)**

(Load: none; Drive: 5 VDC, 50 Hz, 50% duty; Ambient Temperature: room temperature; Sample: ED2-5NU, 20 pieces)

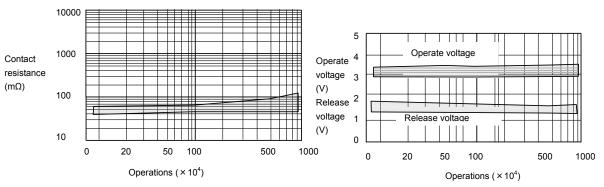

### Running Test (Load)

(Load: 50 VDC, 0.1 A resistive; Drive: 5 VDC, 5 Hz, 50% duty; Ambient Temperature: 85°C; Sample: ED2–5NU, 10 pieces)

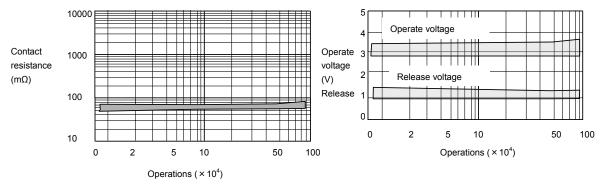




# **Performance Data cont.**


### Breakdown Voltage

(Sample: ED2-5NU, 10 pieces)

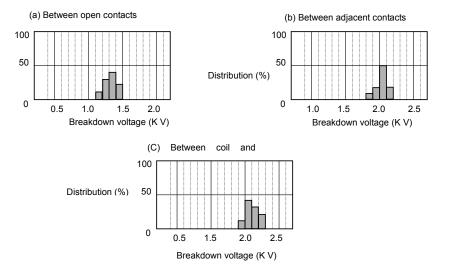


### Alteration of Voltage in Dense Mounting

(magnetic interference)

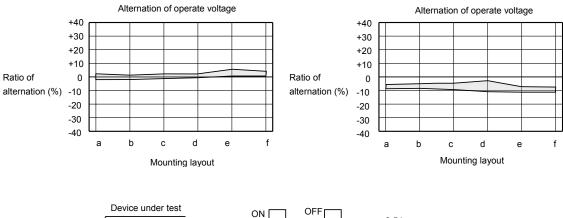

OFF

 d




b

а




с



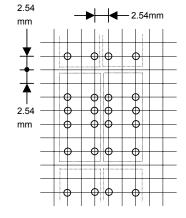




# **Tube Packing – Millimeters**

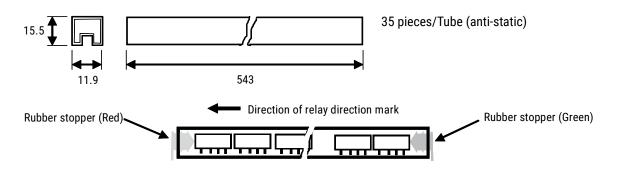


A

# Tape & Reel Packaging Information (EF2 only) – Millimeters

### Appearance

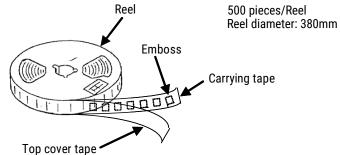


### **Tape Dimensions**

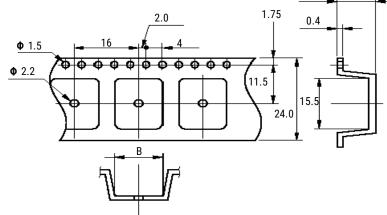

Series	Α	В
NU-L, NUX-L	Maximum 10.9	10.0
NUH-L	Maximum 11.1	8.0

### **Relay Direction Mark and Tape Carrying Direction**

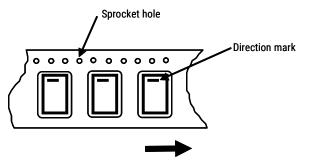




# **Notes on Using Relays**

### 1. Contact Load

Make sure that the contact load is within the specified range; otherwise, the lifetime of the contacts will be shortened considerably. Note that the running performance shown is an example, and that it varies depending on parameters such as the type of load, switching frequency, driver circuit, and ambient temperature under the actual operating conditions.

### 2. Driving Relays

- If the internal connection diagram of a relay shows + and symbols on the coil, apply the rated voltage to the relay in the specified direction. If a rippled DC current source is used, abnormalities such as heat at the coil may occur.
- The maximum voltage that can be applied to the coil of the relay varies depending on the ambient temperature. Generally, the higher the voltage applied to the coil, the shorter the operating time. Note, however, that high voltage also increases the bounce of the contacts and the contact opening and closing frequency, which may shorten the lifetime of the contacts.

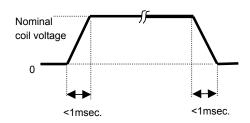

- For consistent operation, the driving voltage should have rise and fall times of less than 1 ms.
- For a latching relay, apply a voltage to the coil according to the polarity specified in the internal connection diagram of the relay.
- If a current is applied to the coil over a long period of time, the coil temperature rises, promoting generation of organic gas inside the relay, which may result in faulty contacts. In this case, use of a latching relay is recommended.
- The operating time and release time indicate the time required for each contact to close after the voltage has been applied to or removed from the coil. However, because the relay has a mechanical structure, a bounce state exists at the end of the operating and release times. Furthermore, because additional time is required until the contact stabilizes after being in a high-resistance state, care must be taken when using the relay at high speeds.


### 3. Operating Environment

- Make sure that the relay mounted in the application set is used within the specified temperature range. Use of a relay at a temperature outside this range may adversely affect insulation or contact performance.
- If the relay is used for a long period of time in highly humid (RH 85% or higher) environment, moisture may be absorbed into the relay. This moisture may react with the NOx and SOx generated by glow discharges that occur when the contacts are opened or closed, producing nitric or sulfuric acid. If this happens, the acid produced may corrode the metallic parts of the relay, causing operational malfunction.
- If any material containing silicon (silicon rubber, silicon oil, and silicon based coating material) is used in the neighborhood of relay, there is some possibility that these materials will emit silicon gas that will penetrate the relay. In this case, the switching contact may generate silicon compounds on the surface of contacts. This silicon compound may result in contact failure. Avoid use of relay in such an environment.



### Notes on Using Relays cont.

• Because the operating temperature range varies depending on the humidity, use the relay in the temperature range illustrated in the figure below. Prevent the relay from being frozen and avoid the generation of condensation.

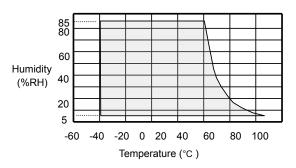

- The relay maintains constant sealability under normal atmospheric pressure (810 to 1,200 hpa). Its sealability may be degraded or the relay may be deformed and malfunction if it is used under barometric conditions exceeding the specified range.
- The same applies when the relay is stored or transported. Keep the upper-limit value of the temperature to which the relay is exposed after it is removed from the carton box to within 50°C.
- Permanent magnets are used in polarized relays. For this reason, when magnets, transformers, or speakers are located nearby the relay characteristics may change and faulty operations may result.
- If excessive vibration or shock is applied to the relay, it may malfunction and the contacts remain closed. Vibration or shock applied to the relay during operation may cause considerable damage to or wearing of the contacts. Note that operation of a snap switch mounted close to the relay or shock due to the operation of magnetic solenoid may also cause malfunctioning.

### 4. Mounting

- When mounting a relay onto a PC board using an automatic chip mounter, if excessive force is applied to the cover of the relay when the relay is chucked or inserted, the cover may be damaged or the characteristics of the relay degraded. Keep the force applied to the relay to within 1 kg.
- Avoid bending the pins to temporarily secure the relay to the PC board. Bending the pins may degrade sealability or adversely affect the internal mechanism.
- Ventilation immediately after soldering is recommended. Avoid immersing the relay in cleaning solvent immediately after soldering due to the danger of thermal shock being applied to the relay.
- Use an alcohol-based or water-based cleaning solvent. Never use thinner and benzene because they may damage the relay housing.
- Do not use ultrasonic cleaning because the vibration energy generated by the ultrasonic waves may cause the contacts to remain closed.

Алматы (7273)495-231 Ангарск (3955)60-70-56 Архангельск (8182)63-90-72 Астрахань (8512)99-46-04 Барнаул (3852)73-04-60 Белгород (4722)40-23-64 Благовещенск (4162)22-76-07 Брянск (4832)59-03-52 Владивосток (423)249-28-31 Владикавказ (8672)28-90-48 Владимир (4922)49-43-18 Волгоград (844)278-03-48 Волоград (8472)26-41-59 Воронеж (473)204-51-73 Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Иркутск (395)279-98-46 Казань (843)206-01-48 Калининград (4012)72-03-81 Калуга (4842)92-2-3-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04 Коломна (4966)23-41-49 Кострома (4962)32-41-49 Кострома (4942)77-07-48 Краснодра (861)203-40-90 Кураснодре (391)204-63-61 Курск (4712)77-13-04 Курск (4712)77-13-04 Курска (4742)52-20-81 Казахстан +7(7172)727-132 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новборск (3439)20-46-81 Новосибирск (383)227-86-73 Омск (3812)21-46-40 Орел (4862)44-53-42 Оренбург (3523)37-68-04 Пенза (8412)22-31-16 Петрозаводск (8142)55-98-37 Псков (8112)59-10-37 Пермь (342)205-81-47

Киргизия +996(312)96-26-47

Ростов-на-Дону (863)308-18-15 Рязань (4912)46-61-64 Самара (846)206-03-16 Тула (487; Саранок (8342)22-96-24 Саранок (8342)22-96-24 Саранок (845)249-38-78 Улан-Удэ Севастополь (8692)22-31-93 Симферополь (3652)67-13-56 Смоленск (4812)29-41-54 Черопове Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Сараропо (862)20-65-13 Саранов (862)22-98-51 Сургут (3462)77-98-35 Чита (302; Сыктывкар (8212)25-95-17 Тамбов (4752)50-40-97 Уроспавл Тверь (482)63-31-35

Тольятти (8482)63-91-07 Томск (3822)98-41-53 Тула (4872)33-79-87 Тюмень (3452)66-21-18 Улан-Удэ (3012)59-97-51 Уфа (347)229-48-12 Хабаровск (4212)92-98-04 Чебоксары (8352)28-53-07 Челябинс (351)202-03-61 Череповец (8202)49-02-64 Чита (3022)38-34-83 Якутск (4112)23-90-97 Ярославль (4852)69-52-93